



# Assembly Instructions


**ULMK-36** Ultra Lite Multi-Cabinet, Ellipse  
**ULCSK-36** Ultra Lite Computer Stand, Kidney

*Note: These cabinets are assembled the same way though they are different shapes.*

1. Lay Top on floor, cleat up.
2. Align the corner of the Shell with the start notch in both cleats.
3. Wrap the Shell around the cleat.
4. Place the Door in the sliding track in the Top from the inside of the cabinet.
5. Flex the Door and place in the sliding track in the Bottom.
6. Turn the cabinet right side up.

### Optional Lock:

7. Test the lock by turning in both directions. Lock should not turn hard.
8. With the lock in the unlocked position slide the Door to test. Door should not slide hard.

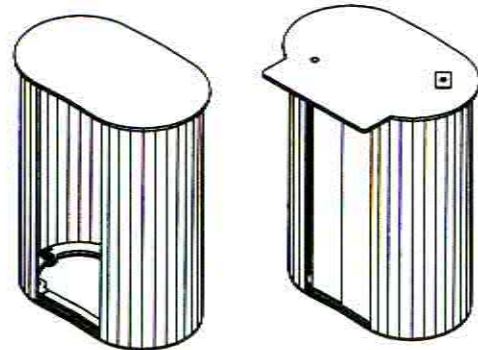

BOTTOM

SHELL

DOOR

TOP WITH CLEAT

START NOTCH

DOOR TRACK  
(TYPICAL)

