

# QUICK START INSTRUCTIONS


## ROLL COUNTER



1. Place base on floor, close to where you want the finished counter to be.



2. Partially screw the 2 rods into the base.

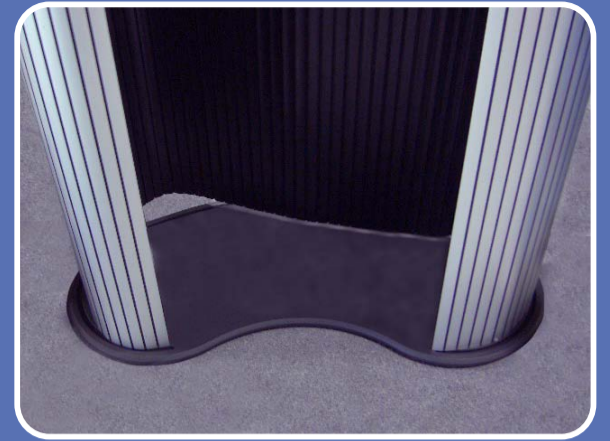

3. Align the tambour into the base channel. Started from one end and work your way around to the other end. Make sure the slots for the shelf are closer to the top.



4. Once tambour is fully seated into the channel, install the 4 "L" brackets to support the shelf.




5. Place shelf on to the brackets.



6. Place the shelf onto the tambour and seat the tambour into the channel.



7. Slide top of rod into bracket under the counter, make sure the tambour is fully seated before proceeding.

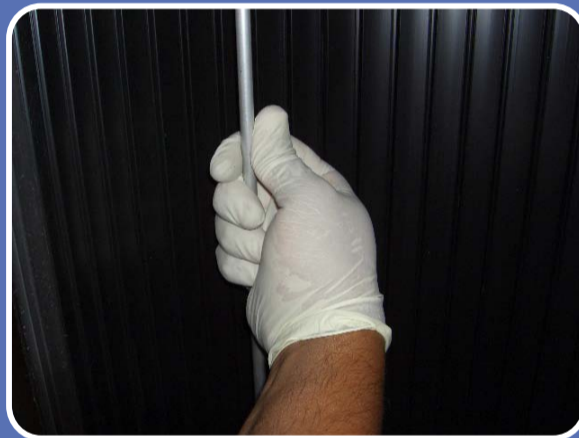


8. Tighten rods snugly by turning them clockwise, check counter again to make sure the tambour is fully seated top and bottom.



9. Finished counter, to make, lift by placing hands under the top (for one person) or finger tips under the top edge (for two people).

## PACKING


BOX 1

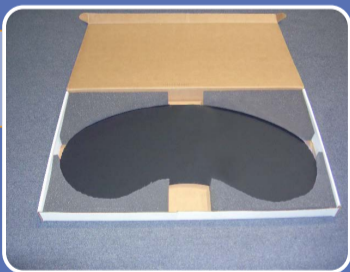

1. Top goes in Box 1st, topside up.




2. Protective foam layer.

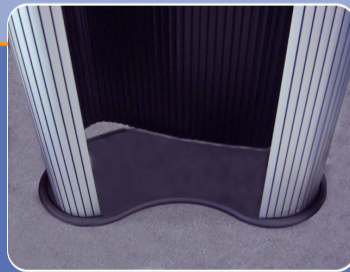

3. Shelf.



4. Protective foam layer.

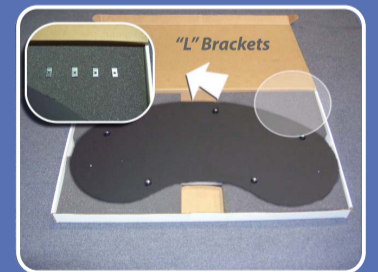


5. Bottom with feet up, 4 brackets push into foam.

BOX 2




6. Empty box, (may look different than pictured).

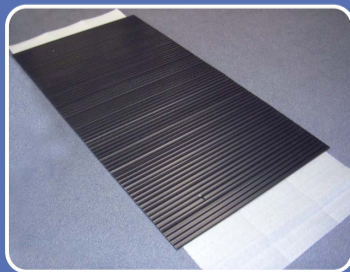

7. Lay painted on colored side against protective foam.



8. Roll into quarter sections.

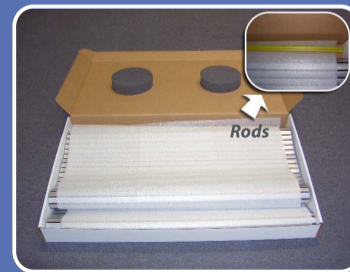

9. Place in box, along with wrapped rods.



10. Closed box.

PACKING CASE



11. Empty 5PCC-02 case.




12. Place box #1 with counters first.



13. Place box #2 with tambour in second.



14. Fill open areas of box with bubble wrap.

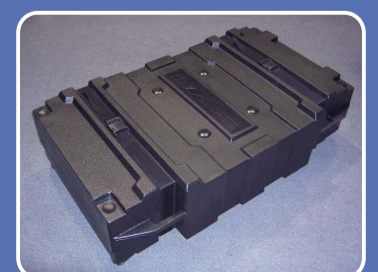

15. Closed case.