




Assembly Instructions

ULME-35 Ultra Lite Multi-Cabinet Ellipse

ULMK-36 Ultra Lite Multi-Cabinet Kidney

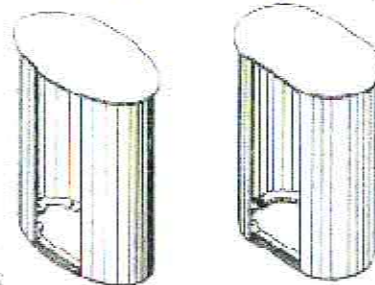

Note: These cabinets are assembled the same way though they are different shapes.

1. Lay top on floor, **cleat up**.
2. Align the corner of the Shell with the start notch in the cleat.
3. Wrap the Shell halfway around the cleat.
4. Align the start notch in the bottom with the same edge of the shell.
5. Supporting the **bottom** with one hand pull the Shell around the cleat.
6. Turn the cabinet **right side up**.

